


RAP-274 INSTRUCTION SHEET

Parts Index

- A. RAM PLASTIC HANDLEBAR MOUNTING BASE
- B. RAM PLASTIC DIAMOND BASE FOR HANDLEBAR
- C. #6-32 STST NYLOCK NUT
- D. #6-32 X 3/8" PH PD STST MACHINE SCREW
- E. #6-32 X 1/2" LONG PH PD STST MACHINE SCREW

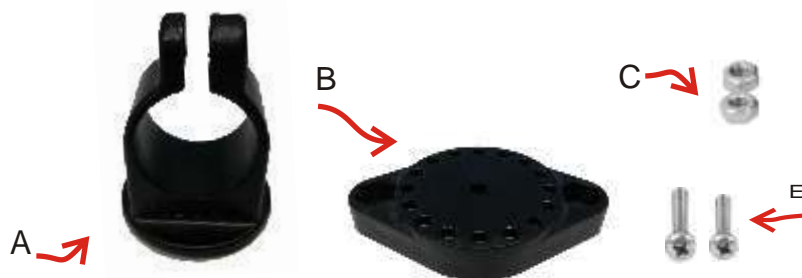

The RAM Rail Mount consists of a locking tooth system with a standard RAM diamond plate end. The mount will fit a rail diameter from 1.0" to 1.1". You can place a rubber lining or electrical tape (not included) between the tube and the mount for a tube with a diameter less than 1". This will help the base grab the rail.

STEP ONE: To mount to a circular rail, simply press the composite U clamp around the rail.

STEP TWO: Then connect and tighten the small nut and bolt to close the U clamp.

STEP THREE: Next connect the diamond plate to the mounted clamp at the required angle and screw in the other bolt through the diamond plate.

Now you are ready to connect any of the RAM Composite HOL Cradles or any other cradle with two holes positioned 1.912" center to center. **NOTE:** You cannot rotate the diamond plate on the U clamp when the cradle is connected.

DAMAGE DUE TO MODIFICATIONS, IMPROPER INSTALLATION, ROAD HAZARDS OR ACCIDENT, ARE NOT COVERED RAM SHALL NOT BE LIABLE FOR ANY INJURY, LOSS, OR DAMAGE, DIRECT OR CONSEQUENTIAL, ARISING OUT OF IMPROPER INSTALLATION, OR INABILITY TO USE ITS INTENDED USE, AND ASSUMES ALL RISKS AND LIABILITY, WHATSOEVER, IN CONNECTION THEREWITH.

National Products, Inc., 1205 S. Orr St., Seattle, WA 98108, (206) 763-8361 www.RAM-MOUNT.com