
RAM X-Grip III™ ASSEMBLY INSTRUCTIONS

PARTS INDEX:

- A. RAM X-Grip III™ SUB ASSEMBLY (QTY. 1)
- B. RAM CRADLE SLIDE SUPPORTS (QTY. 2)
- C. RAM RUBBER CAPS (QTY. 10)
- D. #8-32 X 1/2" MACHINE SCREW (QTY. 2)
- E. #8-32 NYLOCK NUT (QTY. 2)
- F. #8 X 1/2" SHEET METAL SCREW (QTY. 4)
- G. #8 X 5/8" SHEET METAL SCREW (QTY. 2)

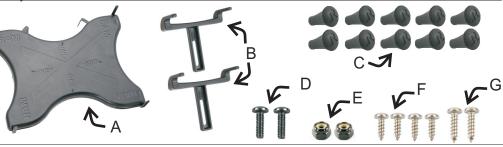

RUBBER CAPS


ATTACH (C) RUBBER CAPS TO EACH END-GRIP ON (A) X-Grip ASSEMBLY AND (B) SLIDE SUPPORTS.




ATTACHING RAM X-Grip™ TO RAM MOUNT

FOR ATTACHING TO METAL OR ROUND BALL ADAPTERS, USE (F) $\frac{1}{2}$ " SCREWS ALONG ANY OF THE HOLE PATTERNS.

FOR ATTACHING TO COMPOSITE DIAMOND BALL ADAPTER (RAP-B-238U), USE (G) 5/8" SCREWS ALONG ANY OF THE HOLE PATTERNS.

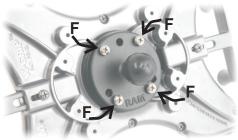

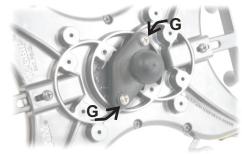


ATTACHING SLIDE SUPPORTS (NOT REQUIRED RECOMMENDED)

1. POSITION (E) NUT AT BOTTOM OF SLOTTED HOLE ON (B) SLIDE SUPPORT.




2. POSITION SLIDE AT AN ANGLE (AS SHOWN) INTO BOTTOM HOLE OF (A) X-Grip™ ASSEMBLY. PRESS SLIGHTLY AGAINST INTERNAL SPRING, AND ANGLE (B) SLIDE SUPPORT BACK TO PINCH (E) NUT AGAINST EDGE OF HOLDER.

DURING THIS STEP, USE CAUTION TO PREVENT NUT FROM FALLING INSIDE OF X-Grip™ ASSEMBLY.

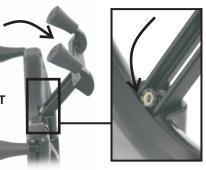

3. WHILE HOLDING (B) SLIDE IN PLACE FROM **STEP 2**, INSERT (D) SCREW AT AN ANGLE TO LINE UP WITH (E) NUT. THREAD BY HAND UNTIL THE SCREW LOCKS IN WITH THE THREADS.

4. ONCE (D) SCREW IS THREADED BY HAND INTO (E) NUT, STRAIGHTEN (B) SUPPORT SLIDE AND FULLY TIGHTEN USING SCREWDRIVER.

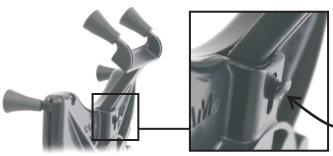

5. REPEAT STEPS 1 - 4 FOR SECOND SUPPORT SLIDE. POSITION TABLET IN HOLDER AND ADJUST SLIDES AS NEEDED. WHEN ADJUSTING SUPPORT SLIDES, DO NOT LOOSEN (D) SCREW BY MORE THAN THREE TURNS.

LIFETIME WARRANTY ON ALL MOUNTING COMPONENTS

The exclusive NPI Lifetime Warranty states that all RAM mounting components and parts are warranted against defect in materials and workmanship for the life of the product or part.

NPI's Lifetime Warranty covers the mount or its components only. The mounted device is not covered under the Lifetime Warranty and will not be replaced if damaged as a result of mount failure.

This warranty is expressly limited to the persons in the United States, and all foreign countries who purchase RAM for resale or use in the ordinary course of the buyer's business. This warranty does not cover any product or part that has been abused, worn out, heated, ground or otherwise altered, used for a purpose other than that for which it was intended, or used in a manner inconsistent with any unstructions regarding its use.



RMR-INS-UN9