

# RAM EZ-STRAP™ ASSEMBLY GUIDE (SIDE A)


## PARTS INDEX:

- A. 1-QTY. EZ-STRAP™ BASE
- B. 1-QTY. RUBBER O-RING (PRE-INSERTED IN BASE)
- C. 1-QTY. RAM EZ-STRAP™ ADJUSTABLE STRAP
- D. 1-QTY. ADHESIVE PAD FOR ADJUSTABLE STRAP
- E. 1-QTY. ADHESIVE PAD FOR EZ-STRAP™ BASE
- F. 1-QTY. STAINLESS STEEL PIN INSERT

## TOOLS NEEDED:

- SCISSORS
- PLIERS
- SCREWDRIVER

1. ATTACH (D) ADHESIVE RUBBER PAD TO (C) STRAP. SLOTS IN ADHESIVE PAD MUST FIT OVER BUMPS ON STRAP.

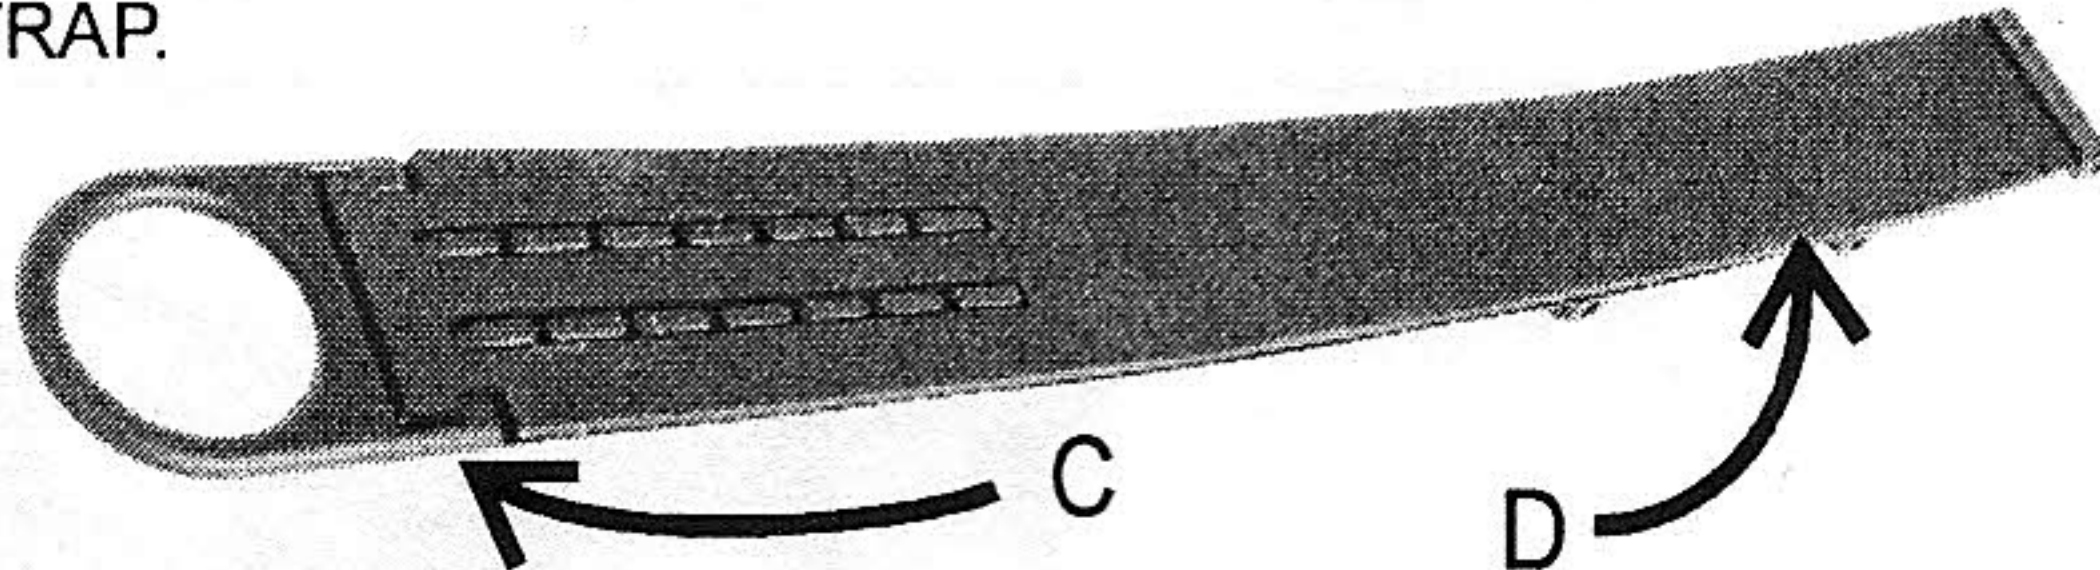

2. CUT OUT MEASURING STRIP SHOWN ON LEFT. WRAP STRIP AROUND AREA WHERE STRAP CLAMP IS TO BE ATTACHED. ALIGN "START HERE" LINE WITH COMPATIBLE SEGMENT TO DETERMINE APPROPRIATE STRAP LENGTH. ONCE CORRECT SEGMENT IS DETERMINED, CUT ONLY ALONG ONE OF THE SHOWN REFERENCE LINES USING SCISSORS.

LONG (NO CUT)


MEDIUM CUT

SHORT CUT




TRIM ANY EXCESS PLASTIC BEHIND STRAP HINGE.

3. WITH (D) ADHESIVE PAD FACE UP, INSERT (F) PIN INSIDE HINGE OF (C) STRAP. PIN MUST PROTRUDE FROM RIGHT SIDE OF HINGE AS SHOWN.

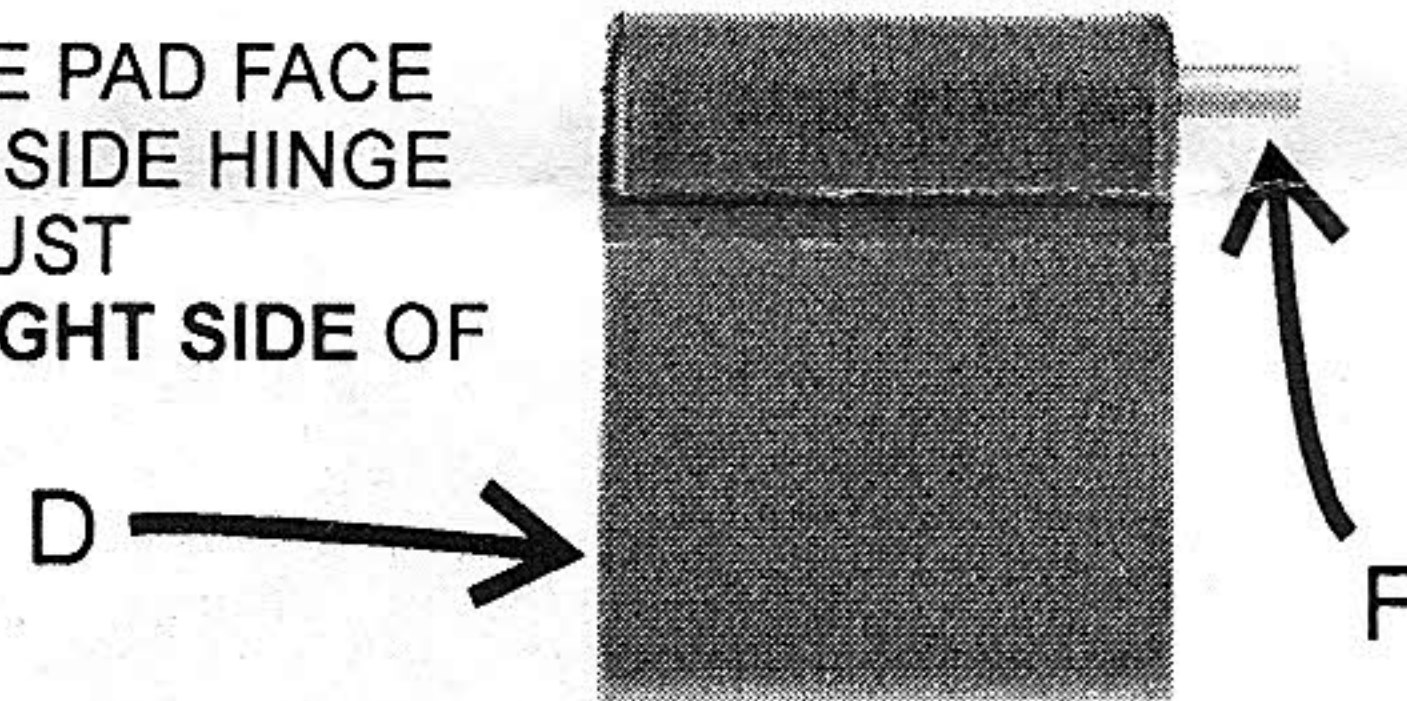


4. POSITION (A) BASE AS SHOWN, INSERT (C) STRAP AND (F) PIN INSIDE PIN HOLE OF (A) BASE, POSITIONING (F) PIN INSIDE RIGHT SLOT OF BASE.

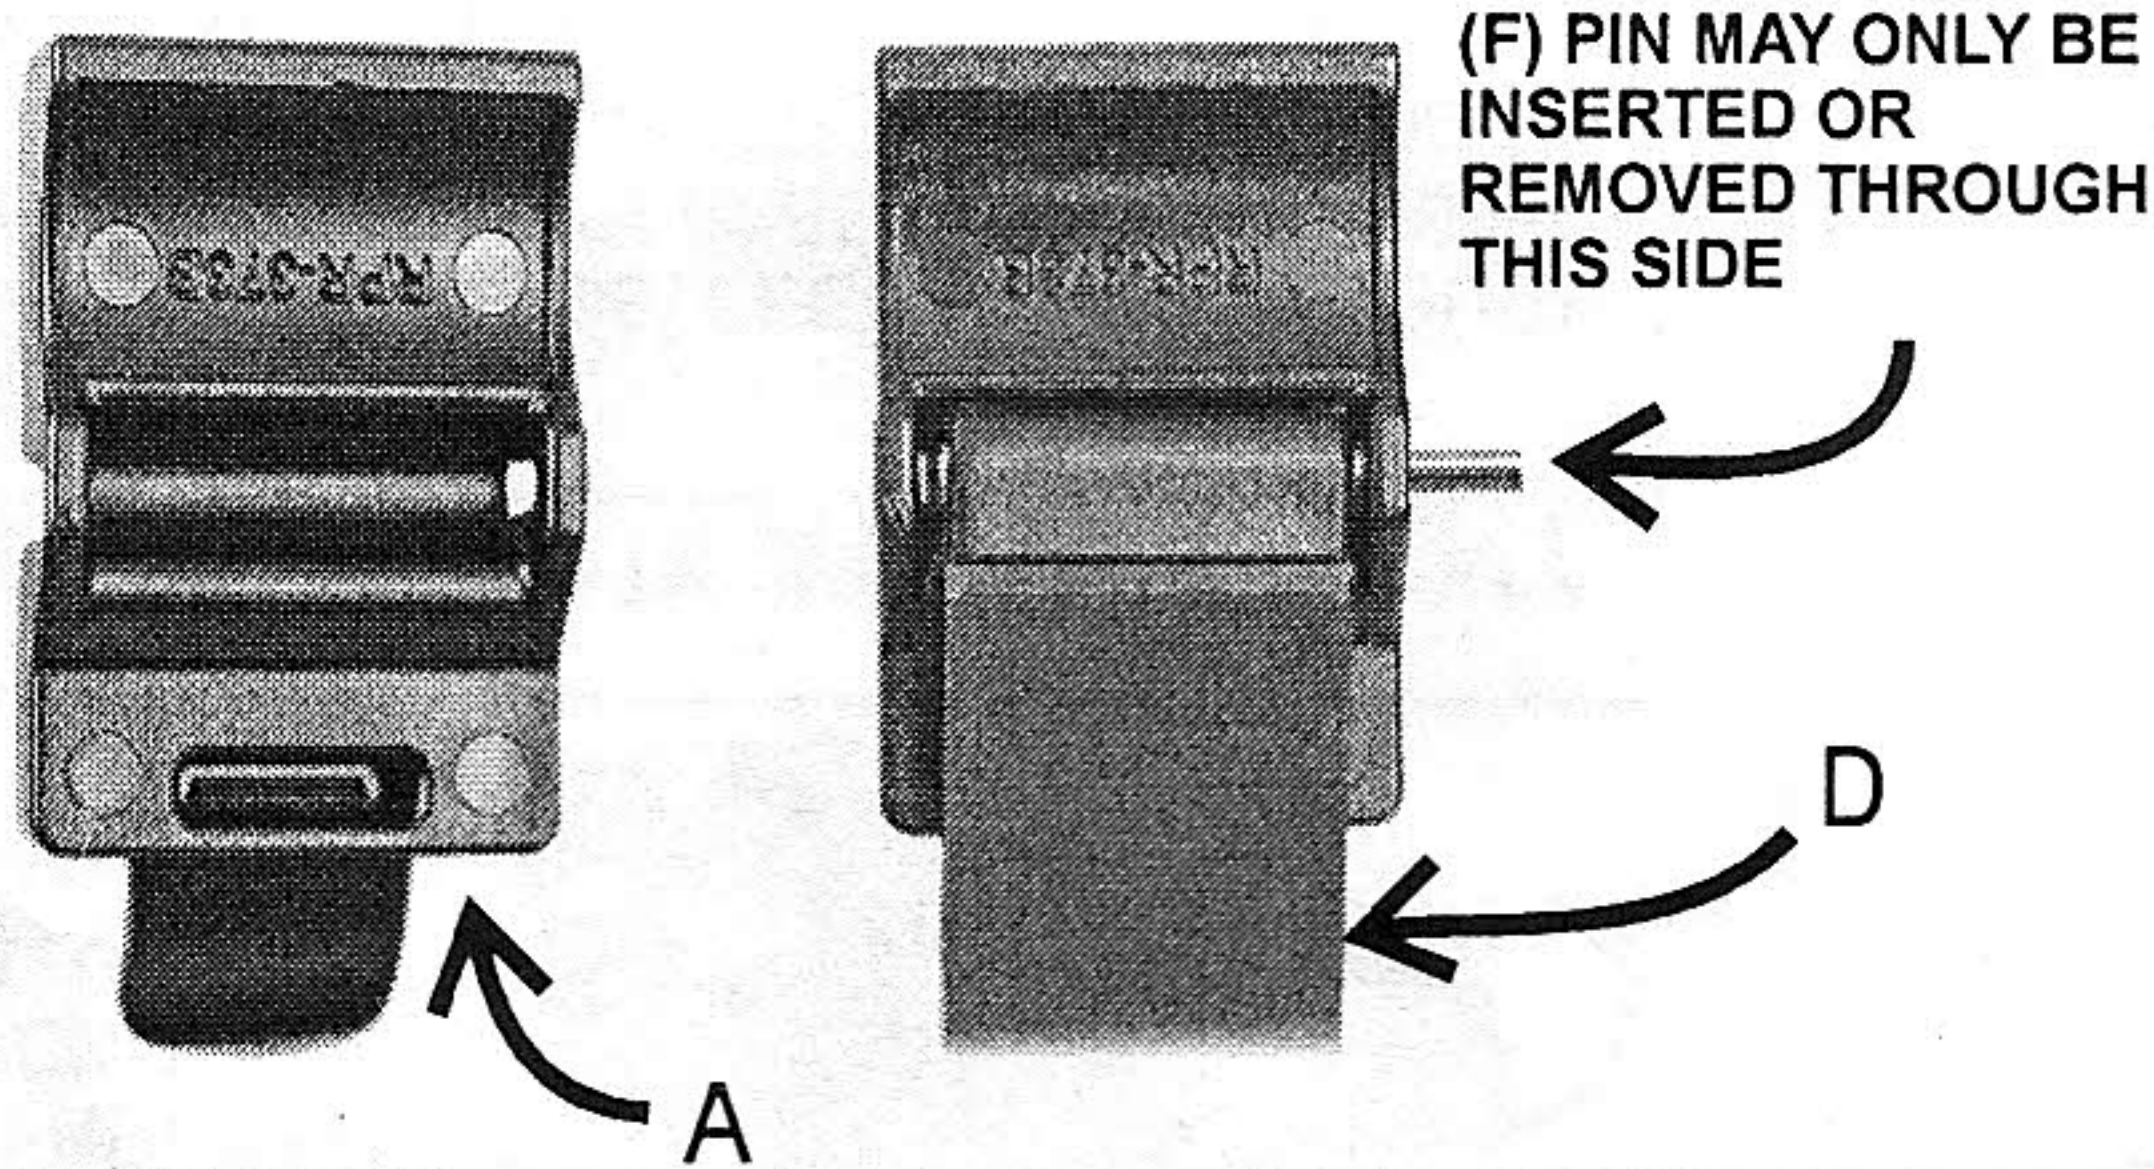


5. WHILE PRESSING (C) STRAP HINGE AGAINST (A) BASE (PLIERS MAY BE NEEDED), PRESS (F) PIN INSIDE HINGE USING SCREWDRIVER UNTIL (F) PIN SNAPS INTO (A) BASE.

PRESS HINGE AGAINST BASE

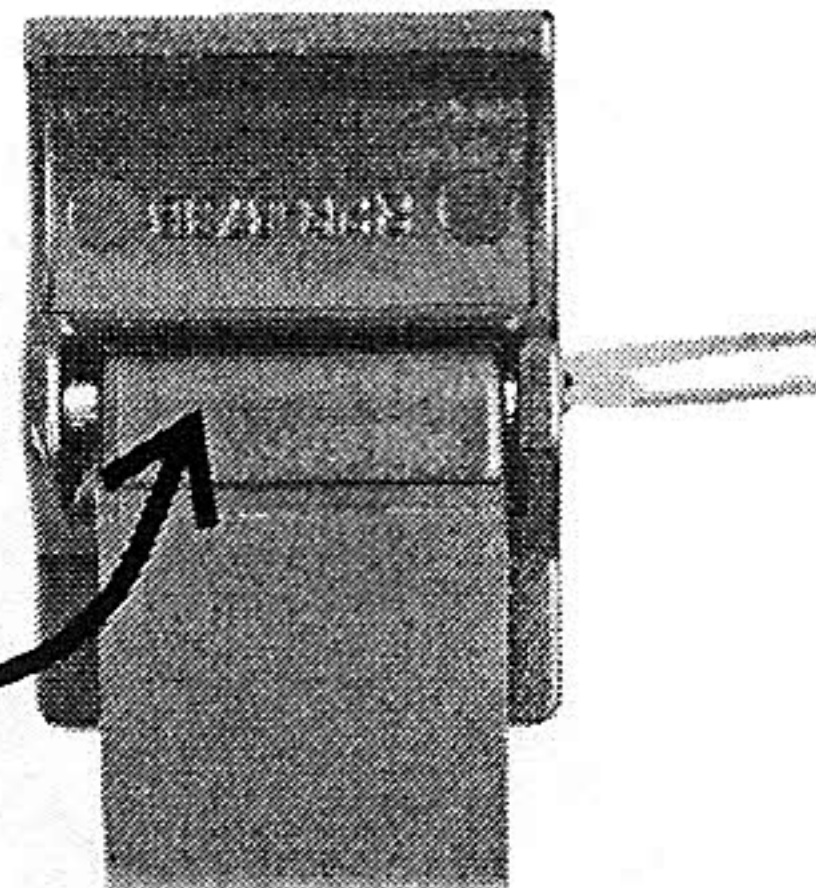

6. ADHERE (E) ADHESIVE PAD TO BOTTOM OF (A) EZ-STRAP™ BASE (OVER "RPR-373B" TEXT).

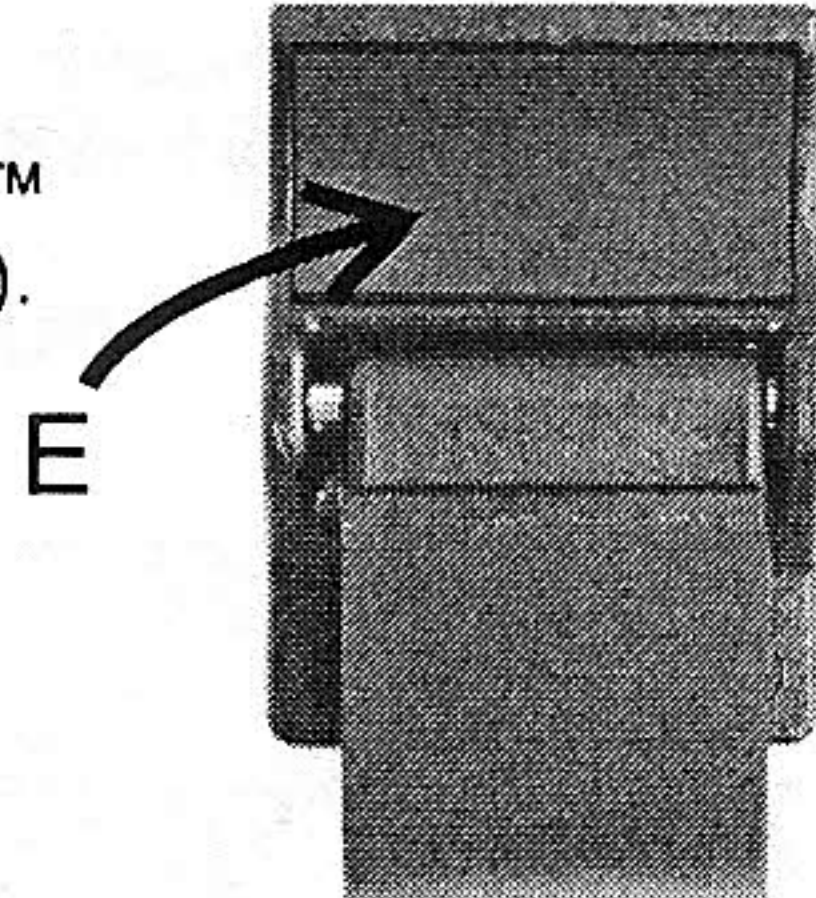

8.164"

LONG

MEDIUM

SHORT


START  
HERE




# RAM EZ-STRAP™ ASSEMBLY GUIDE (SIDE B)

7. ATTACH SNAP-LINK PORTION OF MOUNT TO  
(A) EZ-STRAP™ BASE. SNAP LINK COMPONENTS  
MAY VARY BASED ON PRODUCT PURCHASED.

**RAP-SBA-RRU** **RAP-SBA-RRLU** **RAP-SBA-RGU** **RAP-SBA-RGLU**  
RAM BALL RAM BALL GARMIN BALL GARMIN BALL

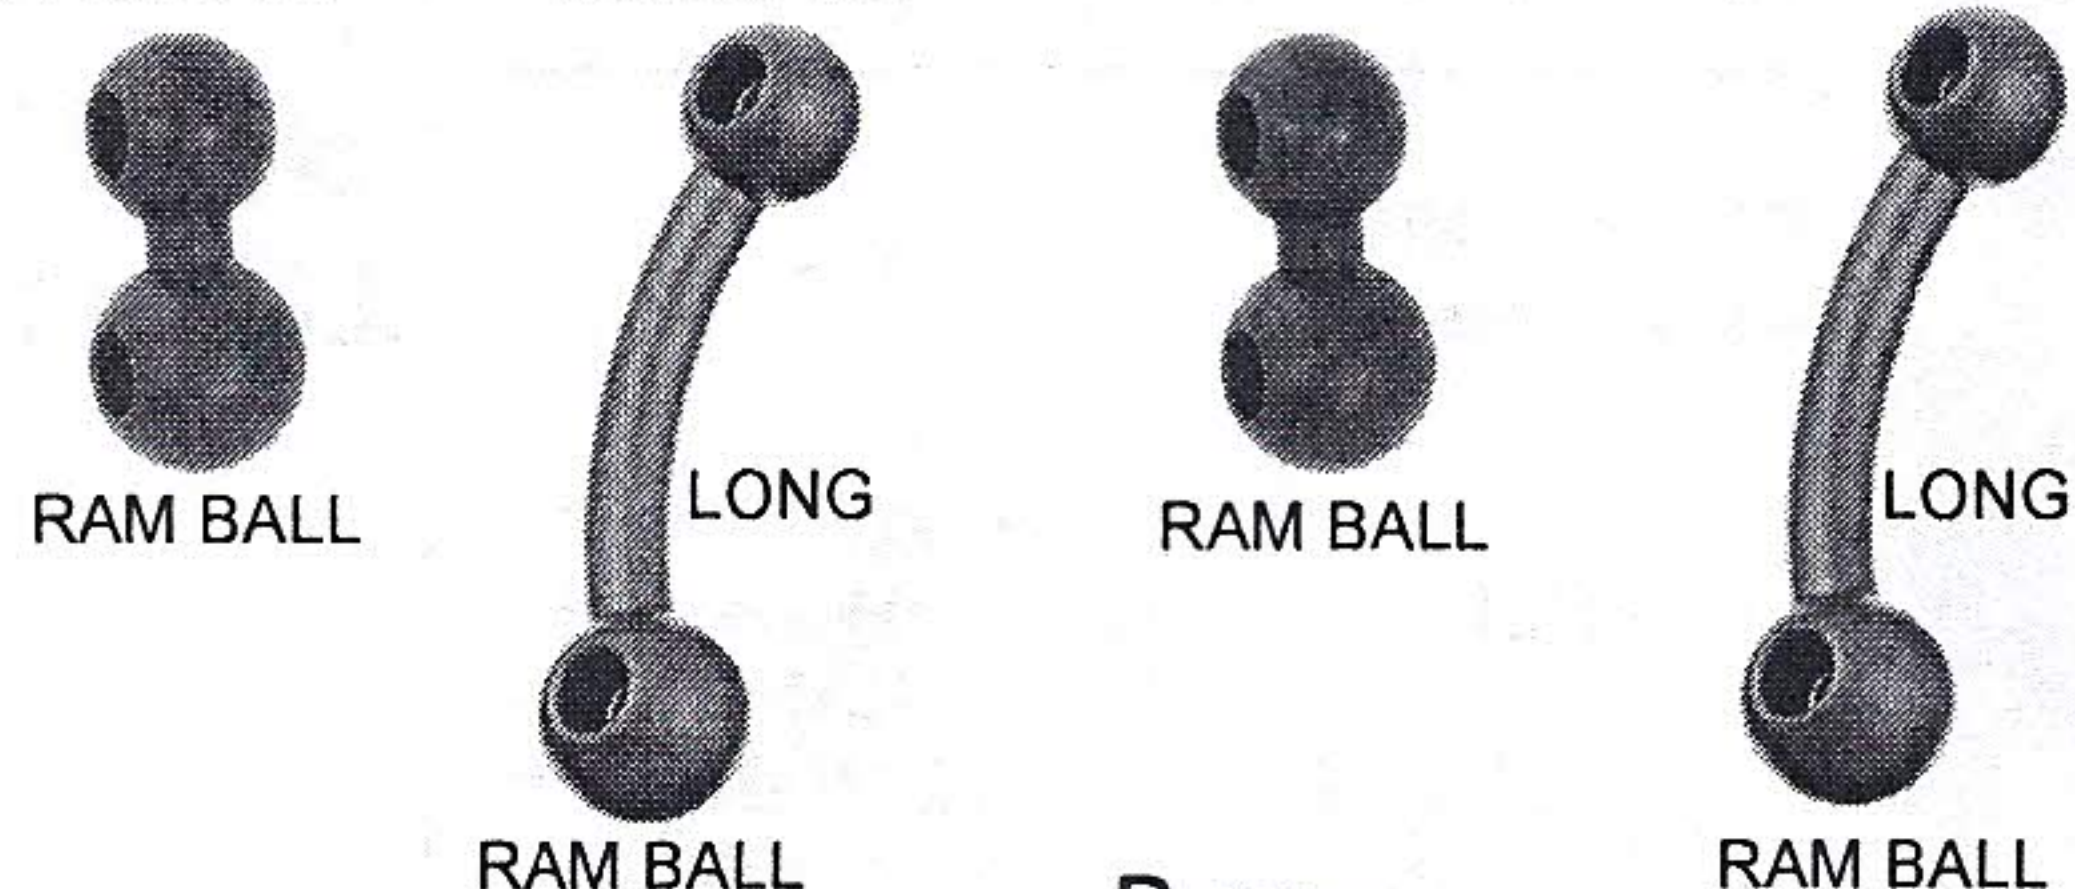


VERIFY THAT (B) RUBBER  
O-RING IS PROPERLY  
INSERTED IN (A) BASE  
PRIOR TO INSTALLATION.

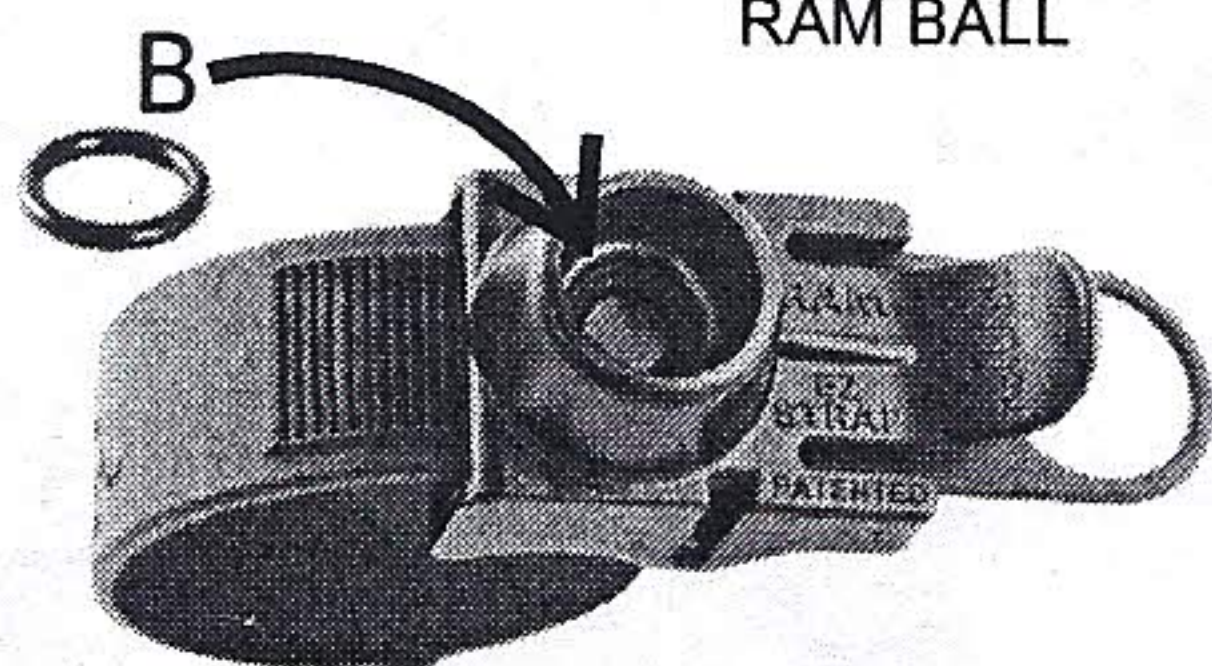

## PROPER EZ-STRAP™ ADJUSTMENT


### TO TIGHTEN EZ-STRAP™

PLACE EZ-STRAP™ ON SURFACE. FEED STRAP THROUGH  
(A) BASE UNTIL STRAP CLICKS IN BASE. WHILE PRESSING  
EZ-STRAP™ BASE AGAINST SURFACE, PULL STRAP BACK  
WITH FOREFINGER UNTIL TIGHT.

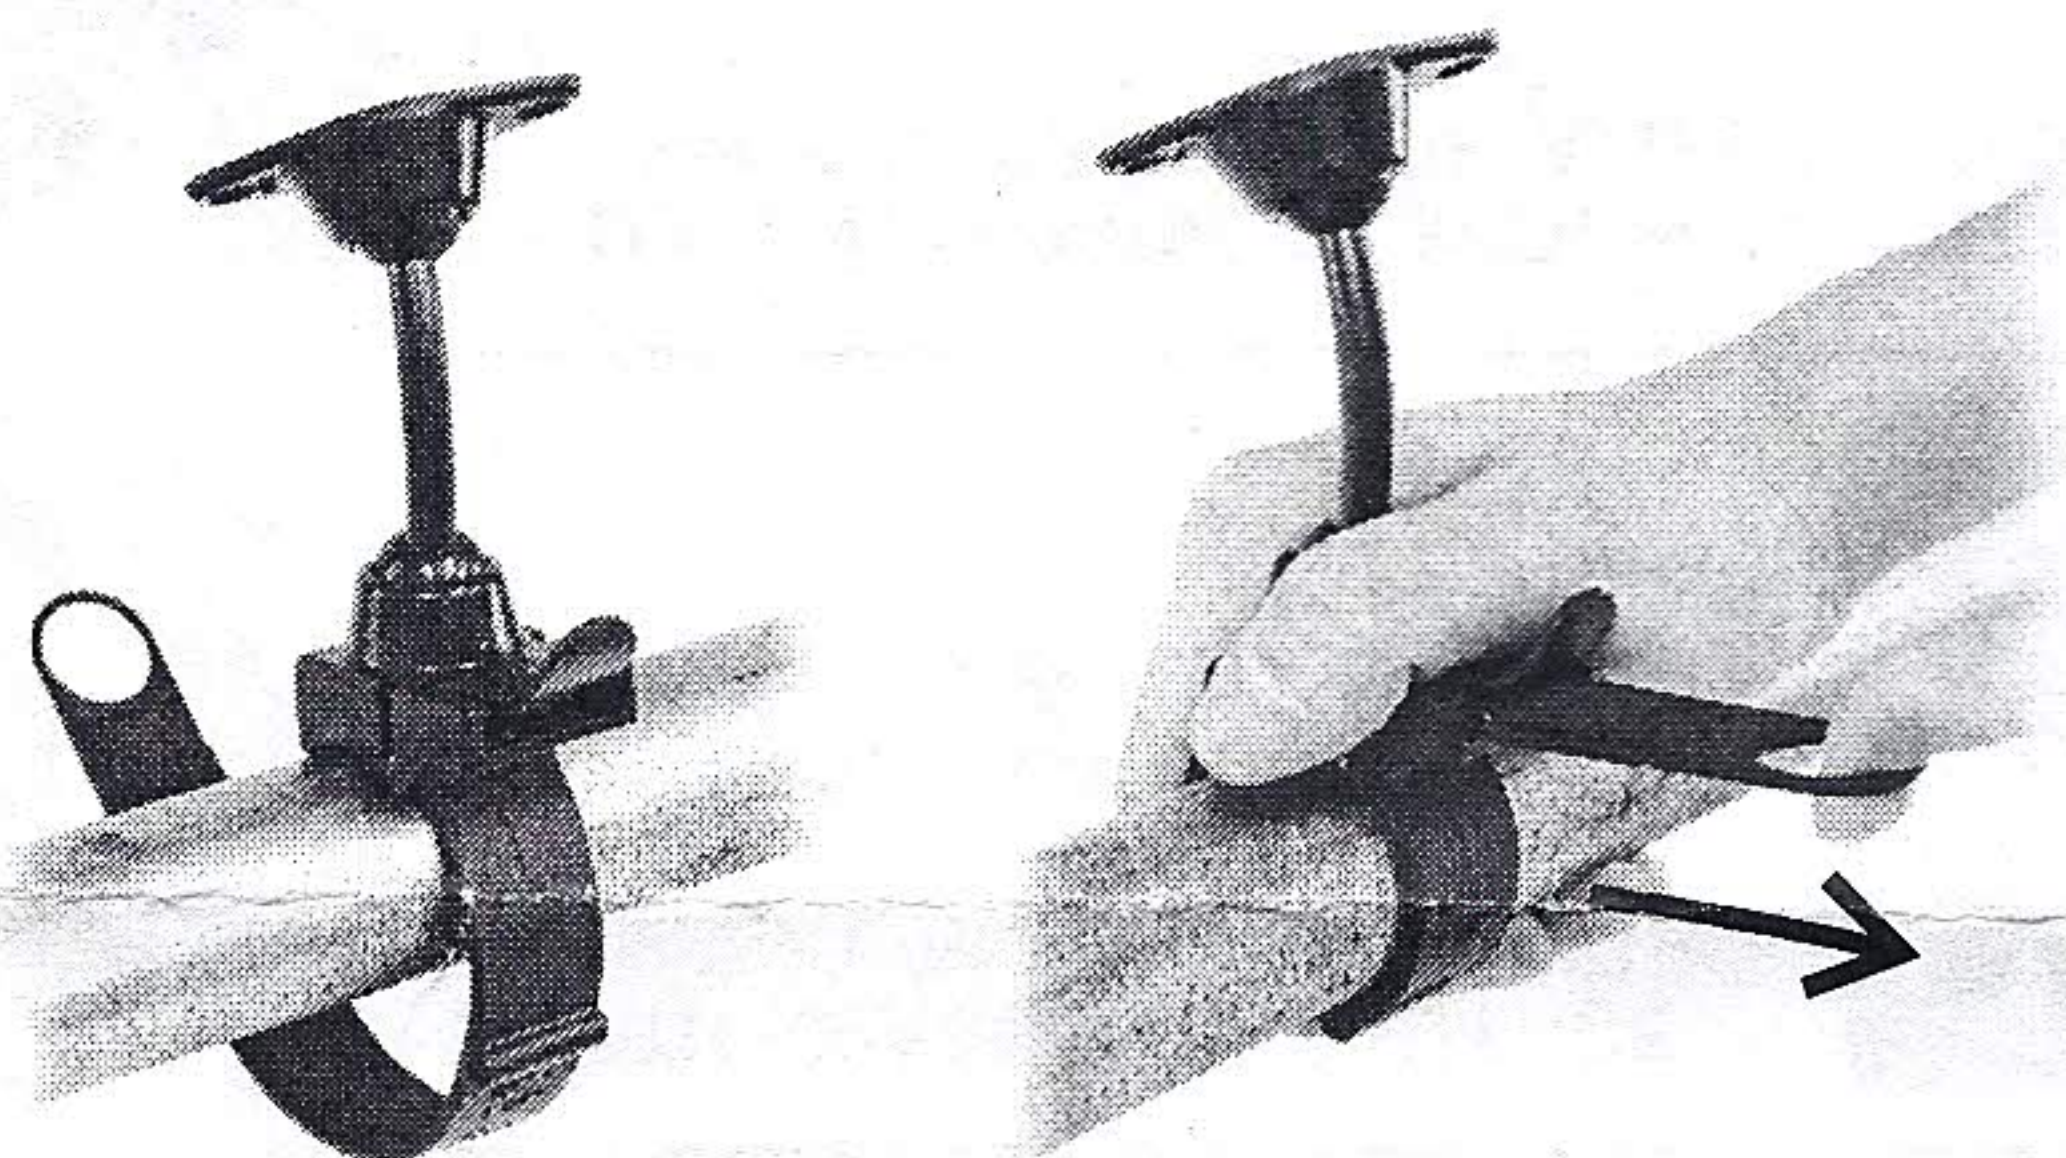

### TO LOOSEN/REMOVE EZ-STRAP™

PULL RELEASE LEVER TOWARD SNAP-LINK MOUNT WITH  
THUMB. FEED STRAP FORWARD TO LOOSEN AND/OR  
REMOVE.

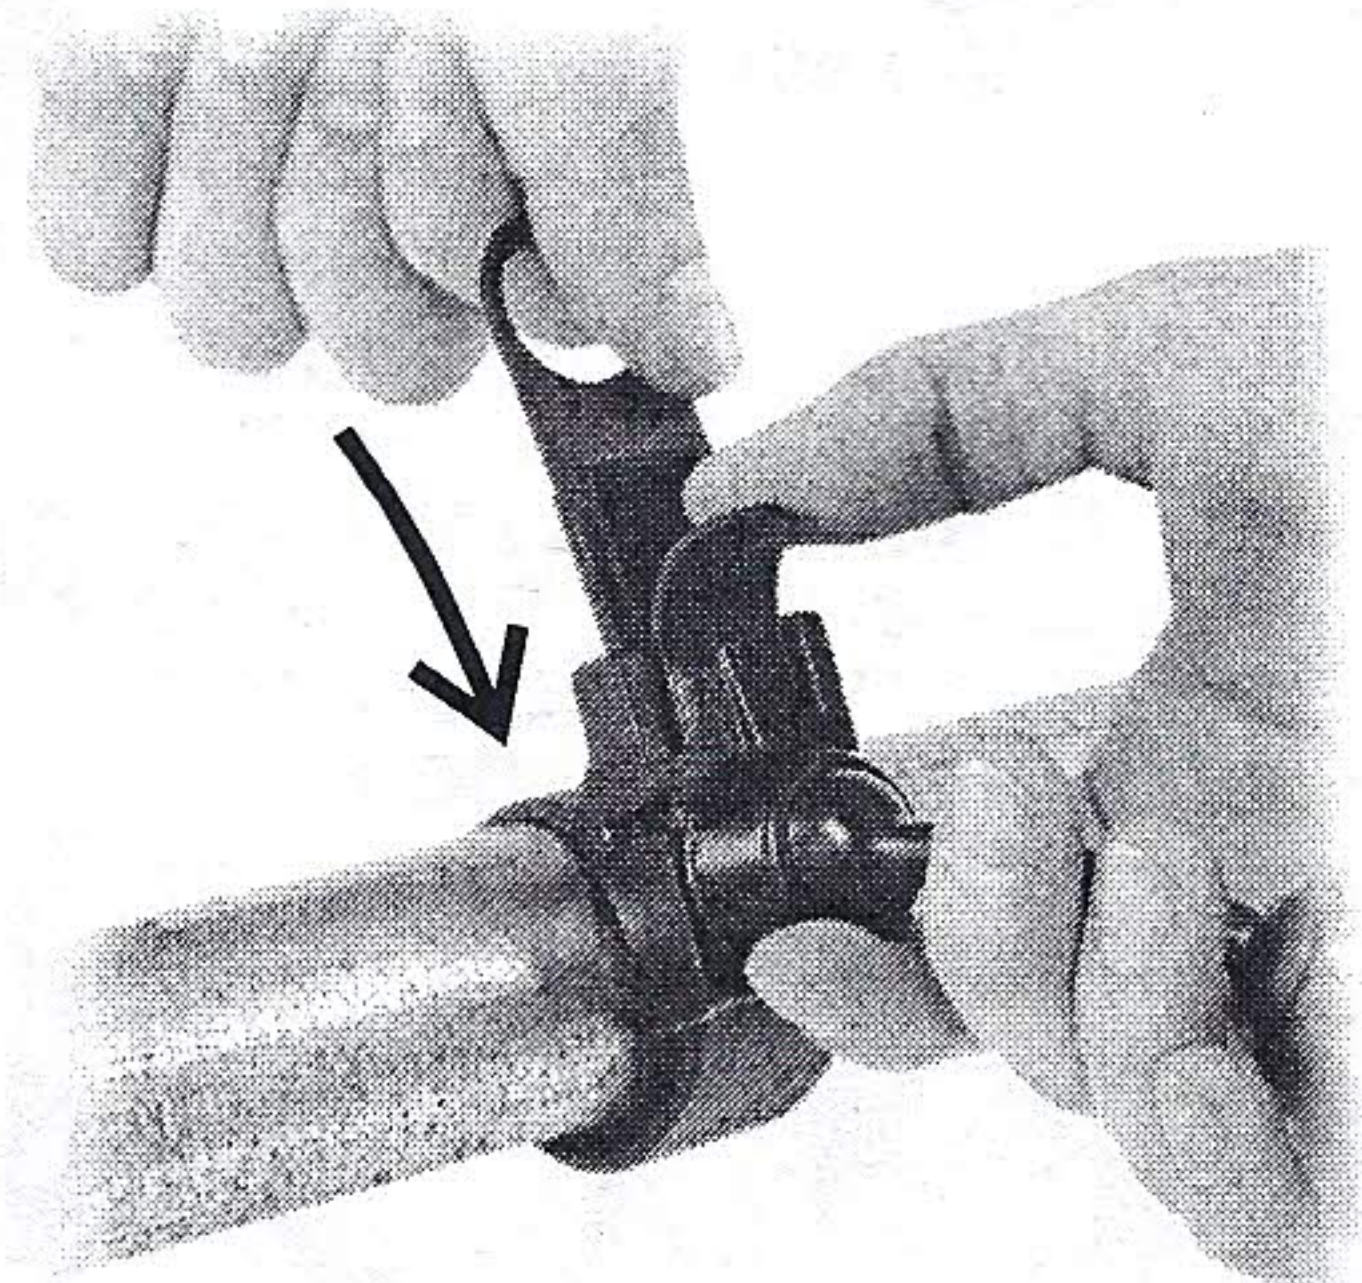

## REPLACING STRAP FROM BASE

FOLLOW THIS STEP IF YOU NEED TO REPLACE YOUR  
CURRENT STRAP WITH A LONGER OR SHORTER STRAP.

FOLLOW **STEPS 5 AND 4** ON REVERSE SIDE. USE  
SCREWDRIVER ON **OPPOSITE** SIDE OF BASE TO PRESS  
(F) PIN OUT THE SAME SIDE IT WAS INSERTED.

WHEN (F) PIN PROTRUDES  
FROM **RIGHT** SIDE OF BASE,  
WEDGE HINGE OF (C) STRAP  
OUT OF BASE TO REMOVE.



National Products Inc., 8410 Dallas Ave S. Seattle, WA 98108  
206-763-8361 [www.ram-mount.com](http://www.ram-mount.com)  
RMR-INS-SB-187