


BUMPER PLACEMENT INSTRUCTIONS FOR iPad 2 & THE NEW iPad ONLY

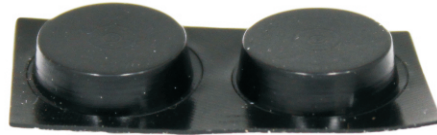

PLACE BLACK ADHESIVE BUMPERS TO TOP CORNERS OF CRADLE AS SHOWN.

USE CAUTION WHEN INSERTING AND REMOVING iPad FROM RAM CRADLE. GENTLY DEFLECT TOP OF ROLLER SLOWLY TO KEEP iPad SAFE. AVOID QUICK-SNAPPING MOTIONS.



RMR-INS-AP8