


RAP-274-1U Instructions

EZ On EZ Off Mount

PART INDEX

- (QTY. 1) QUICK RELEASE SPRING LOADED TOP (A)
- (QTY. 1) QUICK RELEASE BOTTOM (B)
- (QTY. 1) EZ MOUNT RUBBER BASE (C)
- (QTY. 1) EZ MOUNT TAPERED RUBBER BASE (D)
- (QTY. 2) 7" LONG CABLE TIE (E)
- (QTY. 1) 2" x 3" NEOPRENE ADHESIVE STRIP (F)

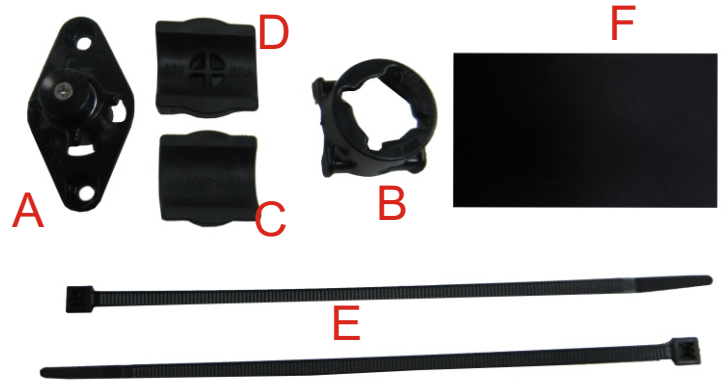

STEP 1,

Combine quick release bottom (B) with either EZ rubber base (C) or (D). Use EZ rubber base (C) for standard handlebars, and EZ rubber base (D) for tapered handlebars. Wrap Neoprene Adhesive strip (F) around bar at location where EZ mount will be installed. The strip can be trimmed as desired but must contact EZ mount at rubber base and at the cable ties to prevent slipping.


STEP 2.

Insert zip ties (E) into quick release bottom (B) with perforated side facing down towards handlebars. Do not fully tighten zip ties until you have reached a desired position on handlebars. Once desired position is reached, completely tighten and remove excess cable tie with scissors.



STEP 3.

Attached quick release spring loaded top (A) to cradle.

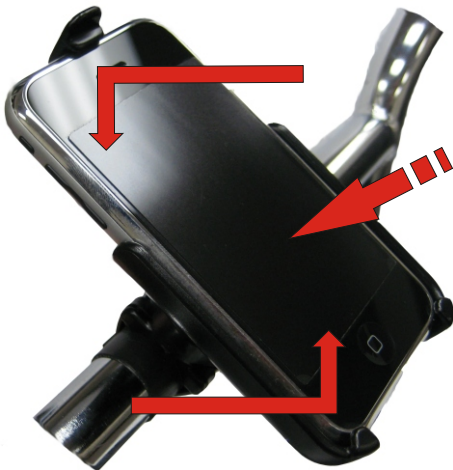

STEP 4

Attach assembly from step 3 by pressing it against the assembly mounted on handlebar, turning, and then letting go.

