
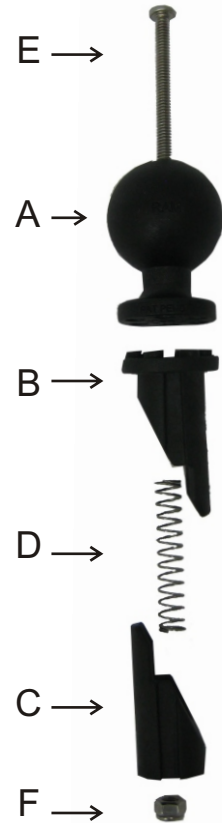


RAP-B-354 & RAP-354 ASSEMBLY INSTRUCTIONS

PART INDEX

- A:** RPR-351-WBC: RAM PLASTIC BASE WITH 1.5"
(OR 1" - RPR-351-WBB) DIA. RUBBER BALL
B: RPR-351-W88F: RAM .87" OD WEDGE LOCK W/ 6 PIN FLANGE
C: RPR-351-W88: RAM .87" OD PLASTIC WEDGE LOCK
D: .360" OD X 2.10" LONG SPRING
E: #10-24 x 4" LONG SCREW
F: #10-24 NYLOCK NUT

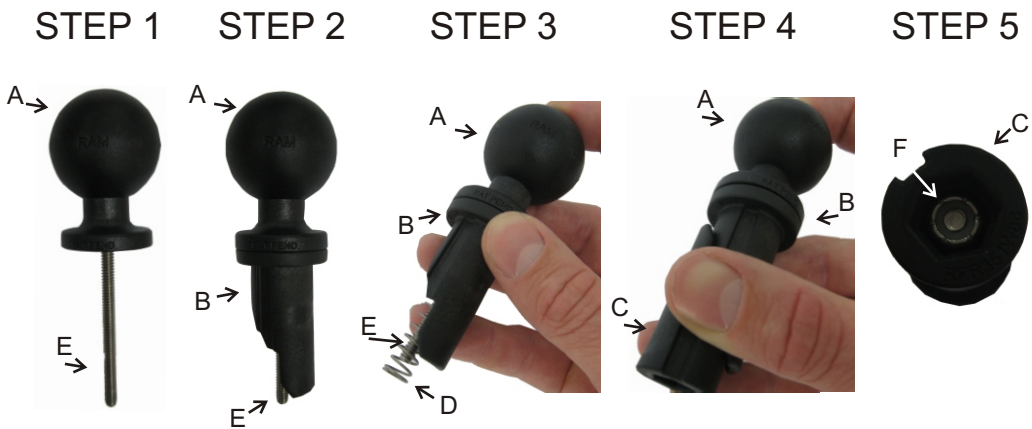

- STEP 1:** Place screw (E) through base with ball (A)
STEP 2: Slide Flange (B) over screw (E) and align with base (A)
STEP 3: Place spring (D) over screw (E)
STEP 4: Place wedge lock (C) over screw (E) and align with flange (B)
STEP 5: Squeeze wedge lock (C) and spring (D) down until screw (E) is exposed from the nut recess, install and tighten nut (F) by hand to hold part in place.
STEP 6: Place assembled RAP-354U or RAP-B-354U in desired location and tighten screw with screw driver until RAP-354U is wedged tight in space

STEP 6



RAP-354U